

## Dimmers and switches

### Digital fade dimmers



- Tap on to favorite level; tap off
- Tap twice for full on
- Press, hold and release for delayed fade-to-off
- Touch rocker to adjust light level
- Provides true dimming from each location (with companion dimmers)
- **eco-dim®** model guarantees at least 15% energy savings compared to a standard switch
- **eco-minder™** green LED demonstrates 15% or more energy savings compared to a standard switch
- Dimmer advanced programming features available



eco-minder™

### Digital switches



- For multi-location switching, use one Maestro multi-location switch with Maestro companion switches
- Tap switch on/off

## Timers

### Countdown timer switches (5–60 minutes/full on)



- Use with exhaust fans to reduce moisture, mold and mildew in bathrooms and kitchens
- Use with lighting
- Tap on to start timer; tap off
- Tap twice for untimed on
- Touch rocker to adjust countdown time
- One minute warning before lights/fan go off
- Top LED is full on with no timer action
- Timer advanced programming features available
- Multi-location control with companion switch

### Countdown eco-timer switch (30 minutes)



- Use with exhaust fans to reduce moisture, mold and mildew in bathrooms and kitchens
- Use with lighting
- Tap on to start timer; tap off
- Touch rocker to adjust countdown time
- One minute warning before lights/fan go off
- **Timer always turns off**
- Single-location only
- Timer advanced programming features available